



COMPATIBILITY

WHICH IS FOR YOU?

L PLATE

FOR CAMERAS WITH A PRONOUNCED HAND GRIP



SEEN HERE ON A SONY A7 SERIES

I PLATE

FOR CAMERAS WITHOUT A PRONOUNCED HAND GRIP



SEEN HERE ON A FUJIFILM X100 SERIES

CAMERAS WE HAVE TRIED OUT

FUJIFILM	
X-T5, X-T4	L PLATE
X-T3 AND OLDER	I PLATE
X-T30 II AND OLDER	I PLATE
X-100 SERIES	I PLATE
X-PRO SERIES	I PLATE
X-H SERIES	L PLATE
X-E4 AND OLDER	I PLATE
X-S10	L PLATE

SONY	
A7 SERIES	L PLATE
A7C	I PLATE
A9	L PLATE
A1	L PLATE
A6000 SERIES	L PLATE
ZV1	X
RX100	X
FX-3	L PLATE

CANON	
R5	L PLATE
R6, R6 II	L PLATE
R7	L PLATE
R8	L PLATE
R10	L PLATE
EOS R	L PLATE
EOS RP	L PLATE
R3	X
R5C	X
G7X	I PLATE
C70	X

NIKON	
Z5	L PLATE
Z6, Z6II	L PLATE
Z7, Z7II	L PLATE
Z9	X
Z30	L PLATE
Z50	L PLATE
ZFC	I PLATE
P1000	X
D850	L PLATE

CLUTCH IS BETTER

LEICA	
Q2, Q	I PLATE
M11, M9, M8	I PLATE
M10, M7 AND OLDER	X
SL2	L PLATE

LUMIX	
S5 II	L PLATE
GH6	L PLATE
GH5	L PLATE
GM5	X
S1	L PLATE

OLYMPUS	
OM-D E-M1	L PLATE
OM-D E-M1X	X
OM-1	L PLATE

RICOH	
GRIIIX	I PLATE

SEE GRIII NOTE BELOW

X - INCOMPATIBLE
(TRY CLUTCH OR CUFF!)

DON'T SEE YOUR CAMERA?
WE HAVEN'T TESTED IT YET!